



1



2



3



4



5



6




7



8



9

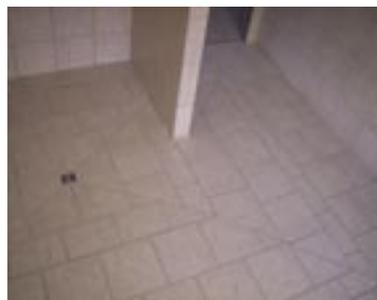

Project Completed !

1. Assemble the wedi drain to the wedi shower pan. Apply a 1/4" modified mortar bed on both the wooden or concrete subfloor and rear side of the Fundo pan.
2. Press the Fundo Pan firmly into the bed of mortar. Check the Fundo pan to ensure it is level.
3. Connect and seal the Fundo pan drain to the 2" drain pipe that is cut flush to the subfloors top surface. Make sure the sub-drain unit is securely mounted.
4. Apply a continuous 1/2" thick bead of wedi polyurethane sealant into the channel of the Fundo Shower Pan. Press the first wedi panel into the fresh sealant in the channel until you see part of the sealant squeezing out along the joint.
5. Fasten the panel to the studs with wedi fasteners starting 1 ft. above the shower pan. Make sure all following building panels are butted tightly together with a 1/4" thick bead of sealant applied on the edge of the panels to waterproof the seams. After the installation is complete, it is recommended to apply another bead of sealant on all joints especially on the Fundo shower pan perimeter joints, curb joints and all vertical joints to avoid any voids in the sealant. All fastener penetrations must be waterproofed on top of the washer-head using the wedi polyurethane sealant. The sealant on top of washers and all excessive joint sealant must be worked flat into the surface of the wedi products to achieve good adhesion and must be smoothed to offer a proper tile surface using a putty knife. After the sealant has set, you may begin to tile.
6. The wedi curbs are fixed and sealed to the Fundo shower pan channel and to wall panels using wedi polyurethane sealant. The curb is bonding to the subfloor using a 1/2" bead of modified mortar.
7. Wedi niches are attached to the 16" o.c. studs using wedi fasteners and the wedi polyurethane sealant in between the joints.
8. The wedi shower system is ready for tile in a fraction of the time needed for traditional methods. Wedi Fundo shower pans must be used with wedi building panels, wedi curbs, and wedi polyurethane sealant only. Simply attach the drain, apply the pan, seal the joints and set your tile !
9. Fundo shower pans can be cut down to size or expanded using the pre-sloped Balco extension panels to virtually any size. The notch connections must be properly sealed with wedi polyurethane sealant.

**Central Oregon**  
**20750 High Desert Lane, #104**  
**Bend, OR 97701**  
**541-306-4455**  
**541-610-1605 fax**

[www.oregonglassblock.com](http://www.oregonglassblock.com)

**Portland Store**  
**12518 NE Airport Way, #150**  
**Portland, OR 97230**  
**503-252-0340**  
**Fax 503-252-4250**